



TEMPERATURE CONTROLLER

Model UATC-20

Item #134360 / Item #133752

INSTRUCTION MANUAL



October 2010
IMS Company
10373 Stafford Road
Chagrin Falls, OH 44023-5296

Telephone: (440) 543-1615
Fax: (440) 543-1069
Email: sales@imscompany.com
Website: www.imscompany.com

TABLE OF CONTENTS

TABLE OF CONTENTS	2
SAFETY SUMMARY	3
ELECTRICAL LOCKOUT.....	5
LIFTING APPARATUS	5
ANTI-ARCING FEATURE.....	7
STANDARD OPERATING FEATURES.....	7
ERROR CODES	9
ERROR ALARMS & INDICATORS.....	10
MENU OPERATING PROCEDURES	12
MENU PARAMETER CHART	12
TROUBLE SHOOTING	15
OTHER FALSE ALARMS.....	17
PRODUCT SPECIFICATIONS.....	18

****Please read these instructions thoroughly before using this instrument.****

IMPORTANT: Make sure the control module power switch is “OFF” and the main frame circuit breaker is “OFF” before inserting or removing control modules.

SAFETY SUMMARY

This manual uses the following signal words to call attention to the safety sign and to designate a degree or level of hazard seriousness.

1. **DANGER:** indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury. This signal word is limited to the most extreme situations.
2. **WARNING:** indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.
3. **CAUTION:** indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. Also used to alert against unsafe practices or property damage only accidents.
4. **NOTE:** indicates general safe practices, machine use instructions and information, property damage only hazards, temporary hazards, precautions to avoid a hazard, results of not avoiding a hazard, or any combination of these messages.
5. **SYMBOL/PICTORIAL:** conveys a message without words.
6. **SAFETY ALERT SYMBOL:** indicates a potential personal injury hazard; an exclamation point inside a triangle.

SAFETY SUMMARY (continued)

The following are examples and types of general alerts that could apply to this machine:

DANGER

LIVE ELECTRICAL PARTS could cause DEATH or SHOCK.

LOCK OUT AND TAG OUT power before working on any electrical wiring.

Only QUALIFIED ELECTRICIANS are to do electrical work.

DO NOT REMOVE or INSTALL control module while housing is connected to power.

WARNING

CHANGES made to machine could cause DEATH, INJURY, or DAMAGE.

Do not modify machine without written approval from
IMS COMPANY.

WARNING

ROTATING PARTS could cause DEATH or SEVERE INJURY.

LOCK OUT/TAG OUT POWER before opening Tumbler Cage.



ELECTRICAL LOCKOUT:

DANGER

ELECTRIC POWER could cause DEATH or INJURY

LOCK OUT/TAG OUT POWER before installing or servicing this equipment.

Each maintenance person should have a personal padlock, with only one key. When working on any equipment this person should use the padlock to lock out the electrical controls. It is most important that the only available key for the lock be in the pocket of the person who is working on the temperature control equipment. If other persons work on the same equipment, each should use their own different lock at a separate lockout station for the controls of the equipment. Accidental startup of the equipment may have tragic results.

In no case should the removal of or work be performed on the temperature control modules or main frames without following proper electrical lockout procedures.

LIFTING APPARATUS:

Temperature control equipment, like any other type of equipment, requires normal periodic maintenance or relocation if the user is to get the most for the investment in the equipment. One of the most flagrant of safety violations is the use of inadequate and unsafe lifting equipment. The temperature control equipment or parts thereof should be assembled, disassembled and moved with lifting facilities that have the capability of gently and slowly lifting and lowering the equipment or various parts.

WHEN USING A CRANE OR FORK LIFT, OPERATE WITHIN ITS RATED CAPACITY, THE SAFE RATED CAPACITY INCLUDES WEIGHT OF HOOKS, BLOCKS, AND ANY OTHER HANDLING DEVICES, SUCH AS CABLES, SLINGS, SPREADER BARS, ETC. CONSIDER THE WEIGHT OF ALL THESE AS PART OF THE LOAD TO BE LIFTED.

CAUTION:

Removing module while power is connected could damage or destroy module. Shut off power to housing and module before removing module. Warranty will be voided if module is removed while it has power.

PLANT SAFETY:

The safety procedures mentioned here do not eliminate all safety hazards found in the area of operation. However, they do highlight some procedures that have been found through long experience to improve safety conditions around temperature control systems. International Temperature Control Inc. welcomes inquiries about other suggested safety procedures for use around their equipment.

OUT OF SERVICE:

When the system is out of service, both the control module and main frame must be turned off.

ANTI-ARCING FEATURE

The module temperature control module is equipped with our innovative Anti-arcing feature that will help prevent damage to the control module and main frame in the event the module is inadvertently removed under load. This feature should not be considered a substitute for proper handling procedures, but rather a supplemental protection mechanism.

If this control module is inserted into a main frame not equipped for Anti-arcing, the instrument will not provide power to the heater and a “toH” error code will be displayed. If this condition occurs, the Anti-arcing jumper can be moved from the #2 & #3 enabled position to the #1 & #2 disabled position. By repositioning the jumper in the Anti-arcing disabled position, the module will function in main frames not equipped with the Anti-arcing feature. Disabling the anti-arcing feature can void your two-year warranty in the event the module is removed from main frame under load, as a resulting in damage to printed circuit board traces.

NOTE: This feature will only work with IMS’s updated Temperature Control Housings, and should not be considered a substitute for proper handling procedures. Disabling the anti-arcing feature could void your two-year warranty if damage occurs.

NOTE: The Anti-arcing feature will not prevent damage if the jumper is not in the enabled position.

NOTE: The Anti-arcing feature of this module will not prevent damage if the module is used in a main frame not properly equipped for Anti-arcing.

IMS temperature control housings manufactured prior to March 2000 were not equipped with the Anti-Arcing feature. They can be upgraded with Anti-Arcing by installing Contact (MF-ECC) in position #3 of Card Edge Connector (MF-EC). Please consult the IMS. (*Refer to the enclosed Anti-arcing sheet for more information.*)

STANDARD OPERATING FEATURES

NORMAL OPERATIONS: Auto Keys

When the power switch on the module is turned on, the control module will look at the existing zone temperature and determine if the “SOFT START” cycle is needed. The “SOFT START” cycle will be activated any time the zone temperature is below 212° Fahrenheit when the module is turned on. Upon completion of the “SOFT START” cycle the module will automatically switch to the automatic control mode. At this time the control module will apply the necessary power to bring the process temperature up to the set point temperature and maintain it, if set point temperature is above 212° Fahrenheit.

SETTING OPERATING TEMPERATURE: Up & Down Key

The set point temperature is normally preset at 400° Fahrenheit at the factory. You can change the set point temperature at any time by pressing the “UP” arrow or “DOWN” arrow keys. The module will remember the last entered set point temperature when it is shut off.

SOFT START KEY:

The “SOFT START” cycle applies a reduced output power to the heater at start up. The module only activates “SOFT START” if the initial process temperature at start up is below 212° F. The output power is gradually increased while the zone temperature is below 212° F. The “SOFT START” cycle time is factory set at 5 minutes. The time duration may be changed by using MENU OPTION “SSt”. (range 0 to 30 minutes)

MANUAL OPERATION KEY:

To operate the control module manually, push the “MAN” key. The percentage of output power will be displayed in the set point window. Push the “UP” or “DOWN” keys to change the output percentage. If thermocouple feedback is not available the process temperature window will show the error code “tCO” or “tCr”. When switching from “AUTO” to “MAN” mode, there is a bump less transfer of power.

NOTE: Other Alarms will not operate in the manual mode.

AMPS KEY:

When the “AMPS” key is pressed the process temperature (upper) window will display the average amperage draw of the heater circuit. To return the display to process temperature press the “AMPS” key again.

BOOST KEY:

Boost is applied for those applications where additional heat is needed for a period of time. Boost mode is selectable both for time and temperature.

Boost Temperature Duration is selectable from 0 to 30 minutes in the “bdu” MENU OPTION.

Boost Time Duration is selectable from 0 to 100 degrees F in the “btp” MENU OPTION.

NOTE: The “BOOST” feature is disabled during the “SOFT START” cycle.

STAND-BY KEY:

When the “STBY” key is pressed the control module will automatically lower the set point to 212° F. in automatic mode only. To return to the previous set point press the “AUTO” key.

NOTE: Pressing “STBY” immediately sets a new set point at 212° F. which may activate the high or low temperature alarm. This is normal and the alarm will deactivate when the temperature nears 212° F. per normal alarm function.

ERROR CODES & ALARMS INDICATORS:

ERROR CODES - Displayed in process temperature (upper) window:

Error Code	Description
tCO	An open thermocouple condition. There is a break within the thermocouple circuit which prevents a complete circuit from being made. Module switches to "APO" mode if selected, otherwise "OFF".
tCr	Thermocouple wires are reversed. The module has detected that the thermocouple is wired backwards. Module will disable power to the heater.
tCs	The thermocouple is shorted. There is a condition within the thermocouple, or thermocouple wiring which is causing a short. Module switches to "APO" mode if selected, otherwise "OFF".
tOh	The module triac or the heater circuit is open. Module will disable power to the heater.
tSh	Main triac is shorted. An over temperature condition has occurred and current flow is detected. The module will disable power to the heater.
HiC	High Current overrun. The module detects current greater than the value set in the MENU OPTION "HcL" parameter and will disable power to the heater.
gFd	Excess current leakage to ground in heater circuit in excess of the value set in the MENU OPTION "gFS". Module will disable power to the heater.

ERRORS & ALARMS INDICATORS:

OPEN THERMOCOUPLE PROTECTION:

In the event a thermocouple fails in the open condition after reaching set point temperature, the module will automatically control temperature with stored APO (Average Power Output) information if the MENU OPTION “tCO” is set to “APO”. This feature only operates at set point temperature.

REVERSED THERMOCOUPLE PROTECTION

The module will scrutinize actual voltage through the thermocouple. In the event a negative voltage is detected, the “tCr” error code will be displayed, and power will not be applied to the heater.

SHORTED THERMOCOUPLE INDICATION:

In the event a thermocouple fails to detect a rise in temperature while power is being applied to the heater, the module will activate an alarm, and the “tCS” error code will be displayed.

OPEN TRIAC/OPEN HEATER:

The module will alert the operator in the event of an open triac or heater, by displaying a “toH” error message in the upper window. This condition is detected if the heater fails to maintain or rise to set point temperature and there is an absence of current flowing to the heater.

SHORTED TRIAC PROTECTION:

Within the circuitry are relays which disable power to the heater in the event the main triac is shorted. In a situation when power to the heater is detected when the temperature is well above the set point, the module will disable power to the heater. A “tSH” error code will then be displayed in the upper window so damage to the mold or heater can be averted.

HIGH CURRENT WARNING:

To help protect valuable molds and other related equipment, a safety device will alarm if a heater is drawing current above its rated capacity. Set the current in MENU OPTION “HiC” to a value just above the heaters maximum current draw. The module will trigger an alarm and disable power to the heater if current exceeds the set value. Utilizing this feature can save time and expense by calling attention to a problem before damage occurs. In “PARAMETERS” menu the range may be set between 1.0 and 16.0 amps.

GROUND FAULT SENSITIVITY:

The control module is equipped with a ground fault detection circuit. When the “SOFT START” cycle terminates, the control module will check for current leakage to ground in the heater circuit. If leakage is detected in excess of the value entered in “gFS” MENU OPTION, the control module will alarm and “gFd” will be displayed in the process temperature window. The ground fault sensitivity is factory set at 120mA. Sensitivity may be adjusted or turned off in MENU OPTION “gFS”. To disable ground fault, first set the option to “OFF” then turn the module off and then back on. (range 60 to 180 mA)

HIGH AND LOW TEMPERATURE ALARM:

The high and low temperature alarms have been factory set at 30° F. If the zone temperature drops 30° below the set point or if the temperature exceeds 30° above the set point, the alarm will activate and the “HIGH” or “LOW” LED will activate.

BLOWN FUSE INDICATION:

In the event that one or both of the module power fuses blow, the red LED’s labeled “F1” or “F2” will come on indicating which fuse has blown. CAUTION: only the proper fuses must be used in order to prevent module damage and void the warranty. Fuses are available from IMS.

MENU MODE

MENU MODE OPERATING PROCEDURE:

1. To enter the “MENU” mode, press the “MENU” key to scroll through menu until the desired option appears in the process temperature (upper) window. As you scroll through the options menu, the current setting of each option will be displayed in the set point (lower) window.
2. To scroll through the options menu, continue to press the option's key until the desired option code appears in the upper window.
3. To change the setting of an option displayed in the upper window, press the “UP” or “DOWN” arrow key.
4. To set the parameter and exit the “MENU” mode, continue to press the “MENU” key until you reach the end of the options menu. The controller will restart after storing the new values.

CAUTION: While in the “MENU” mode, the module will not control temperature. Therefore it is recommended that any changes be made at start up.

UATC-20 “MENU” Parameter Chart

CODE	FUNCTION	SETTINGS
<i>C-F</i>	<i>Temperature display mode</i>	°C or (°F)
<i>AL</i>	Audible Alarm	(On) or OFF
<i>tCb</i>	T/C break option	(APO) – Average Power Output or OFF
<i>Out</i>	Output Type	(F2y) or Pid
<i>SSt</i>	Soft Start Time	0-20 minutes (5)
<i>gFS</i>	Ground Fault Sensitivity	60-180 mA or “OFF” (120)
<i>HiL</i>	Maximum Current	1.0 – 16.0 Amps (16.0)
<i>btp</i>	Boost Temperature Setting	0° - 100° F (30 °)
<i>bdu</i>	Boost Temperature Duration Setting	0-30 minutes (5)
<i>J-K</i>	Thermocouple Type	(J) or K
<i>SSL</i>	Soft Start Lock	(ON) or OFF
<i>FPL</i>	Front Panel Lockout	LOC or (uLC)

Factory settings in parenthesis.

“MENU” - PARAMETER SETTINGS:

C-F CELSIUS OR FAHRENHEIT SETTING:

This parameter allows selection of either “C” or “F” temperature ranges – select “C” or “F”.

-
-
- AL AUDIBLE ALARM SETTING:
Build in alarm – Select “ON” or “OFF”.
- tCb THERMOCOUPLE OPEN PARAMETER SETTING:
(APO – Average Power Output). If this option is set to “APO” and the thermocouple input is lost during operation the control module will alarm and indicate that the thermocouple input is open. However, instead of disabling power to the heater, the instrument will continue to apply the same average power to the heater as applied just prior to losing the thermocouple signal. Factory set to “APO” but may be turned “OFF”.
- Out OUTPUT POWER CONTROL METHOD:
“F2y” (fuzzy) or “Pid” (Adaptive-Auto-Tuning). “F2y” will control the zone temperature by adjusting the power to the heater, providing a ripple free effect and improving heater life. “Pid” will control the temperature by turning the heater on and off proportionately. Typically either method will control as well as the other. However, the “Pid” control method must be used when the module is operating solid state relays. This control method is usually factory set to “F2y” unless solid state relays are being used to switch output power.
- SST SOFT START SETTING:
Select 0 to 20 minutes. Factory set at 5 minutes.
- gFS GROUND FAULT SENSITIVITY SETTING:
Select 60 – 180mA or “OFF”. Factory set at 120 mA. To disable ground fault, first set the option to “OFF”, then turn the module off and then back on.
- HcL HIGH CURRENT LIMIT SETTING:
Select 1 – 16 amps. Factory set at 16 amps. If the module detects a current draw that exceeds the set value, it will cut power to the heater and display an “HiC” warning. This option allows for setting a current warning level just above the maximum draw of the heater. When the instrument detects a current greater than the set value, it will alarm and shut off power to the heater.
- btp BOOST TEMPERATURE SETTING:
This feature allows for the input of a temperature value by which the set point can be increased when Boost is activated. Factory set at 30° F. Boost has a selectable temperature range of 0° to 100° F.
- bdu BOOST TEMPERATURE DURATION SETTING:
This parameter allows user to set the duration time the temperature boost is to remain on at the desired boost temperature.

J-K THERMOCOUPLE TYPE:

This parameter allows the operator to select either “J” to “K” type thermocouple, depending on the requirements.

SSL SOFT START LOCK:

This parameter prevents the Soft Start parameter from being overridden from the front panel. The Soft Start cycle must be completed prior to entering either manual or automatic control mode. Factory set to “ON” or select “OFF”.

FPL FRONT PANEL LOCK SETTING:

This parameter locks the front panel keys with the exception of “AMPS” & “MENU”. This lockout prevents accidental changing of temperature settings, etc. Select “LOC” for lock or “uLC” for un-lock.

TROUBLE SHOOTING

NOTE:

It is assumed that the system has been installed in accordance to the proper instructions, that all wiring is correct and that power to the system is as specified on the controller.

Normally problems have two basic forms:

First, relate to the Controller, Wiring, Heaters or Thermocouples. These problems usually present themselves as abnormal indications on the control module, i.e. absence of or blinking lights & displays and error codes.

Second, revolve around the design and/or manufacturing of the mold, the hot runner system (manifold), or the actual processing conditions. These problems are often difficult to identify and repair.

PROBLEMS:

The module will not turn on:

SOLUTIONS:

1. Check input power.
2. Ensure input power is in proper phase.
3. Check power cord connections.
4. Check that main frame is turned on.
5. Check fuses (Bussman ABC-15), if blown check for wiring short.
6. Swap module with known good module.
7. Return defective module for repairs.

Temperature won't settle on set point:

1. Give module more time to settle on set point.
2. Molding process may have a wide variation in temperature. Check to see if changes in display temperature are in the same cycle as molding process.

Lights dim:

1. Check actual input voltage, should be same as module rating.

The module falsely indicates thermocouple shorted: 1. Check "tOs" time setting.

Module appears to operate properly, but no power is being applied to the heater: 1. Main frame is not set up for Anti-arcing.
2. Move jumper from pin position #2 & #3 (Enabled) to pin position #1 & #2 (Disabled).

Mold is unusually cold:

1. Allow tool to warm up in Soft Start mode.
2. Check mold thermocouple/heater wiring.
3. Thermocouple/Heater not wired to proper zone.
4. Thermocouple/Heater defective.
5. Make sure input power voltage is correct.
6. Return defective module for repairs.

Temperature above set-point:
correctly.

1. Thermocouple shorted or not wired
2. Triac shorted.

Tool overheats:

1. Is temperature display set to F°?
2. Check thermocouple.
3. Replace triac.
4. Return defective module for repairs.

Open thermocouple:

1. Check thermocouple & mold wiring.

Reversed thermocouple:

1. Correct thermocouple mold wiring.

Ground Fault:

1. Heater/Wiring is wet – if so dry out.
2. Replace heater.
2. Repair heater wiring.

Module blows fuses:

1. Make sure heater size does not exceed module rating.
 2. Make sure this is not the result of a shorted heater or a short in the tool wiring. Do not replace module until problem is corrected as damage may result.
- NOTE: Blown fuses are not caused by the module, they are caused by an outside factor.

Temperature Oscillation:

1. This is usually caused by the location, or the thermocouple being too far from the heater it is controlling. Proper procedures dictate that the heater & thermocouple should be within 1/2” of each other.
2. Oscillation can also be caused when the melt temperature is significantly above or below the set point.

Temperature too high:

1. Normally this is caused by heat from adjacent zones.
2. The melt temperature of the plastic is hotter than the set point for the zone.
3. Thermocouple may not be wired to the same control module as the heater.

No heat indication:

1. Heater is not connected.
2. Heater is too small.
3. Heater is burned out.
4. Heater is too far from thermocouple.

It is also possible something has occurred electrically to upset the microprocessor in the control module. It indicates that there is more interference in the power line to the control system than the filtering in the power supply can accommodate. A random occurrence is not cause for concern. The solution usually is to connect the controller as close to the electrical service supply as possible, and not to the molding machine, where motors, solenoids, etc can cause interference.

OTHER FALSE ALARMS

- You may experience false alarms due to the time settings of certain options. The factory time settings may not be the proper setting for your particular zone characteristics.
- Zones that heat slowly may need extended time for open heater and shorted thermocouple detection (tOh). Conversely you may want to decrease the time for zones that heat to rapidly.
- If you are in a situation where mold changes are frequent and you do not want to take the time to adjust these settings to the mold characteristics, you can set all of the settings to the highest level or in some cases turn them off. However, this will substantially reduce the control module's many diagnostic benefits and its ability to prevent heater runaway and mold damage.

If an instrument is not functioning properly or needs calibration, we highly recommend that you return it to IMS for service. In most cases your module will not be correctly repaired at other facilities.

Please call us if you need assistance with any problem. Phone: (800) 537-5375

PRODUCT SPECIFICATIONS:

Voltage	208 to 240vac, single phase
Current.....	15 amps
Frequency.....	50/60 Hz
Wattage.....	3600
On/Off Key	Auto Latching (stays on last setting if power is lost)
Physical Configuration	Plugs in for easy interchangeability
Compatibility	Compatible with "G" Series housings
Size	2" Wide, 7" High, 7-1/2" Deep,
Weight	1-1/2 #
DC Power Supply	Internally generated regulated and compensated
Module Power Usage.....	Less than 5 watts, excluding load
Set point Range.....	0° to 999° F (537° C)
Control Accuracy.....	+/- 1° F (0.5° C) dependent on total thermal system
Calibration Accuracy	Better than 0.2% of full range
Operating Temperature Range.....	32 to 120 degrees F
Thermocouple.....	Type J, or Type K grounded or ungrounded
External Thermocouple Resistance	High impedance potentiometer input allows long distance T/C wiring
Thermocouple Isolation.....	Isolated from ground & supply voltages
Output Drive	Internal solid state triac, zero crossing AC pulses
Ground Fault Sensitivity.....	0 to 255 mv, default 120 mv.
High/Low Temperature Alarm	Factory set @ +/- 30 degrees F
Overload Protection.....	Fuses on both sides of AC line
Transient Protection.....	dv/dt and transient pulse suppression
Shorted Triac Heater Protection	Highly sensitive, fast acting relays cut power to load
Power Line Isolation.....	Optically and transformer isolated from AC lines. Isolation voltage greater than 2500 volts
Display.....	Dual LED displays, 3-digit, 7-segment
Manual Mode.....	Maintains constant output power to within 1% of manual set power. Adjustable from 0 to 100%
Soft Start.....	Variable stepped voltage, phase fired
Soft Start Duration.....	5 Minutes (Adjustable) up to 212 degrees F
Soft Start Override Temperature	212° F
Operational Modes	Soft Start precedes Auto Mode. Thermocouple break overrides Soft Start and Auto Mode. Reversed or shorted thermocouple overrides Soft Start and Auto Mode. Manual Mode overrides thermocouple break, reversed, shorted thermocouple and Auto Mode. Output is disabled during all fault conditions.
Cold Junction Compensation	Automatic, better than 0.02° F/F° (0.01° C/C)
Open Thermocouple Protection	Automatically disables power to heater or Average Power Output (APO).
Reversed Thermocouple Protection.....	Automatically disables power to heater
Shorted Thermocouple Protection	Automatically disables power to heater or Average Power Output.
Warranty	2-Years